


# Quick Start Guide

L26W781B / L32W781B  
L37W781B / L42W781B

## 1 Insert batteries into Remote Control

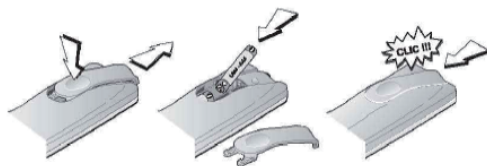

*Remove the cover of the battery compartment.*

*Install two LR03 / AAA batteries in the remote control.*

## 2 Install TV


### How to assemble and disassemble base:

Lay TV set face-down on a cloth or other soft surface.

- 1** assemble: Insert the stand base and fix these four screws.
- 2** disassemble: Unfix these four screws and remove the stand base.

### How to reveal screw holes to fit wall mounting:


- 1** Remove the stand base
- 2** Fasten six units M4.0 X 10mm screws to secure the wall mount bracket.

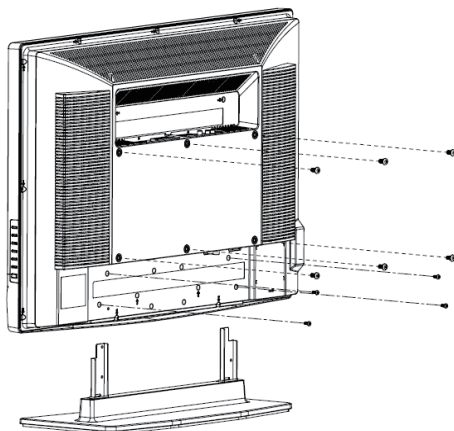


# 3

## Connections

- 1 Plug in aerial and firmly into the aerial socket ANT IN  $75\Omega$  at the back of the TV and connect ancillary equipment.

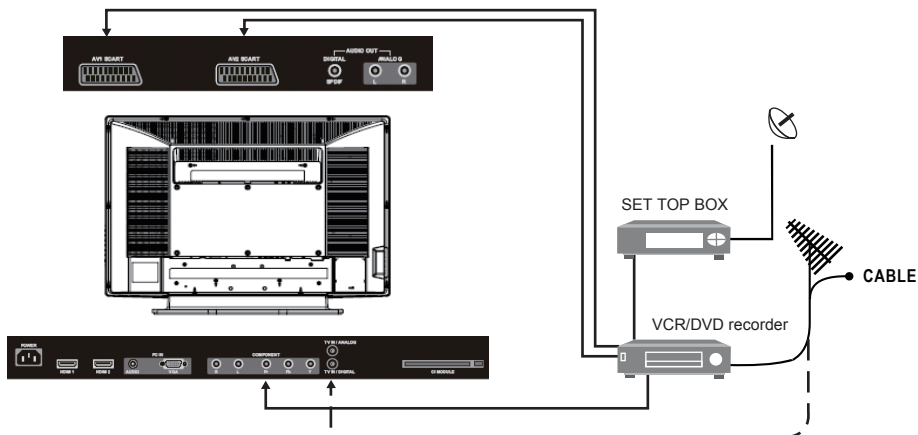


- 2 Plug the power cord into household mains socket.

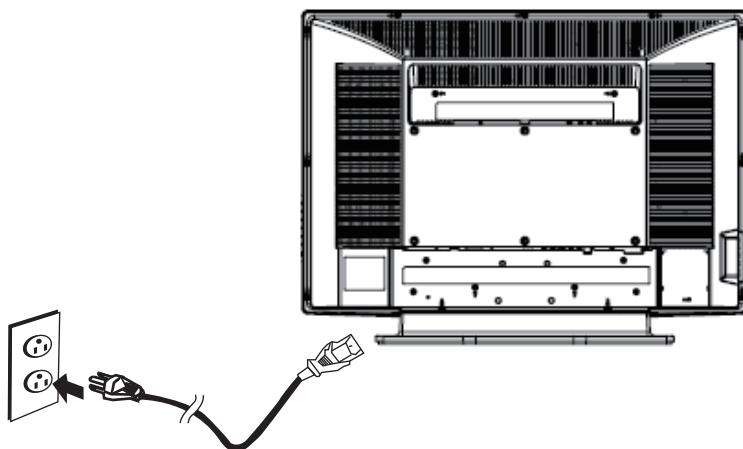

NOTE: Outline for reference only

# 4 Switch on

- 1** Plug your TV and any other equipment that you have connected into the mains.
- 2** Press the **On/Standby** switch (⏻) on the right side of your TV to switch on your TV. Go to step 5.

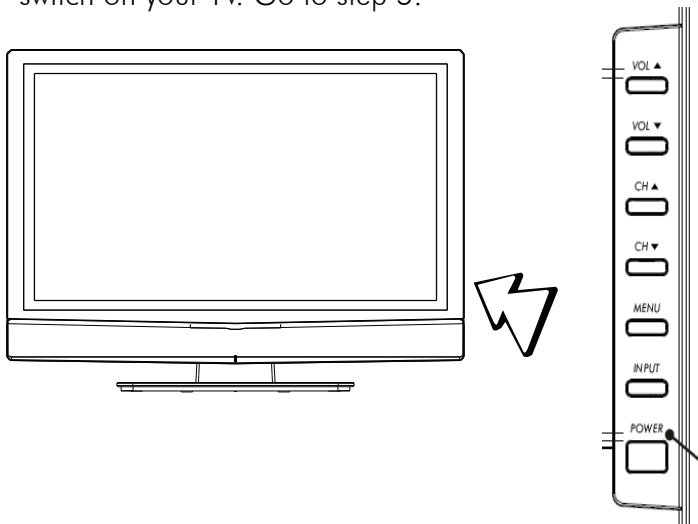

NOTE: Outline for reference only

## IMPORTANT NOTES

- a** There are two ways to switch the TV set to stand-by mode.
- (A) Press the switch on the LCD TV and check GREEN LED is lit.
- OR
- (B) Press the Power button on the remote controller.


The remote controller can switch on the TV set if it was switched to stand-by using method (A) or method (B).

- b** Press CH "▲", "▼" or MENU "▲", "▼" button on the remote controller to brows through the TV channels.
- c** Press VOL "+", "-" or MENU "◀", "▶" button on the remote controller to adjust the volume.

# 5


## Quick OSD Guide

- 1 Press the **MENU** button on the remote controller into the main OSD (On Screen Display).

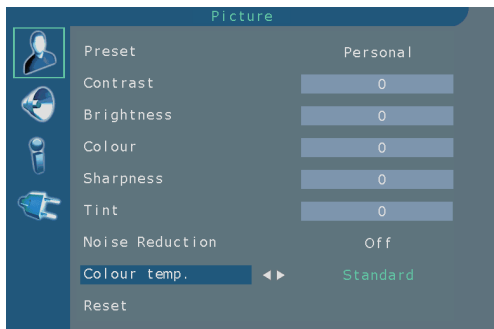



Use the “▲”, “▼” button on the remote controller to select the desired item ,then use “◀” or “▶” button to enter it, and use “MENU” button for exit.

- 2 **Select the Language**  
From **MENU → OPTIONS → MENU LANGUAGE**, to select the desired language.

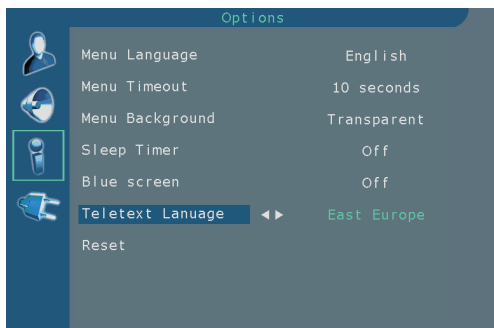

- 3 **Select the Country**  
From **MENU → INSTALLATION → AUTO. INSTALLATION → COUNTRY**, to select the desired country

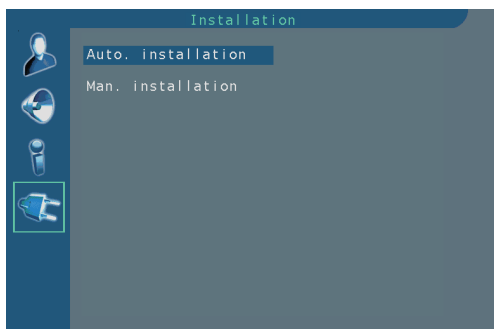


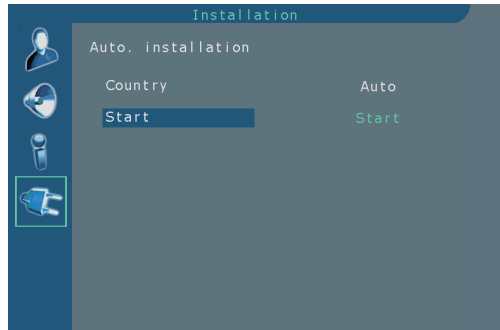

When selected country ok, move to “**START**”, then press “◀” or “▶” button to scan programme, your stations will be located and stored.

#### **4 Programme Sorting**

From **MENU → INSTALLATION → MAN. INSTALLATION**

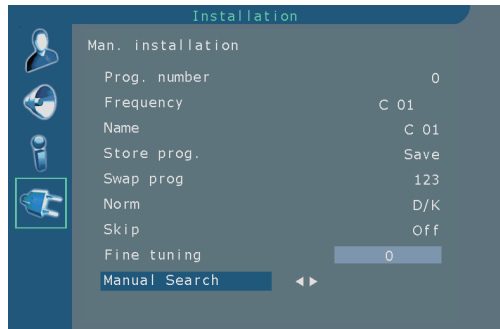

- a** Store prog. : Allows to Save a channel on a new Program No, to Insert a channel on an already existing Program No(the channel previously saved on this program no will be shifted to the upper program no) or to Delete the Program No.

Once a channel has been found and named, use the √ button to select the Store prog. option.

Using the < / > buttons, select Save, Insert or Delete and press the OK button to confirm.

- b** Swap prog : Allows to swap 2 programme numbers.

Using the ^ / √ buttons select the Prog. number option.

Using the < / > buttons, select the program to be moved.

Using the √ button, select the Swap prog option.

Using the > button, enter the swap function.

Using the 0-9 digit, enter the new programme number(3 digits).

Press the OK button to confirm, the programme numbers are swapped.